WHAT'S INCLUDED:

- LED LIGHT POD

- WIRING KIT & MOUNTING BASE

- INSTALLATION HARDWARE

- LED LIGHT UNIT

TOOLS REQUIRED:

- RATCHET AND SOCKET SET

- 3M TAPE OR ADHESIVE

- SCREWDRIVER

- TRIM TOOL

CONTACT US:
SALES@4X4PREDATOR.CO.UK

1. Install 4x LED lights into position on the roof light base, this can be done off the car.

2. Use strong double sided tape or adhesive such as Tiger Seal to mount the base into position on the roof.

3. Place the top cover over the lights and base.

4. Secure the cover to the base using the supplied installation hardware.

5. Feed the power cable from the corner of the roof light and behind the upper corner of the windscreen.

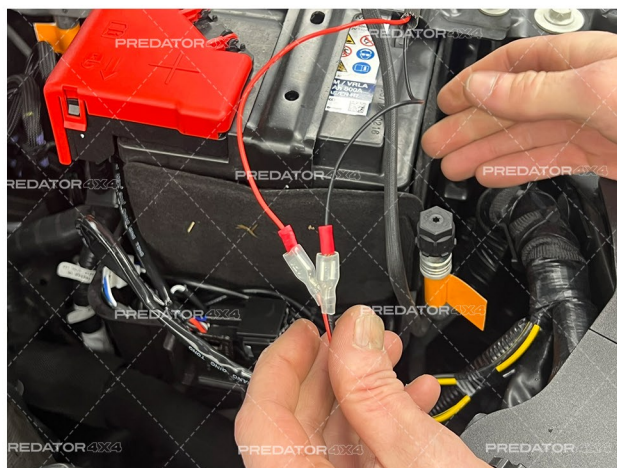**6.** Use a trim tool or credit card to push the cable under the edge of the windscreen.

7. Remove the corner section of the scuttle panel and feed the cable underneath.

8. Re-install the corner piece of the scuttle panel.

9. Use strong double sided tape to secure the wireless control fob to battery tray.
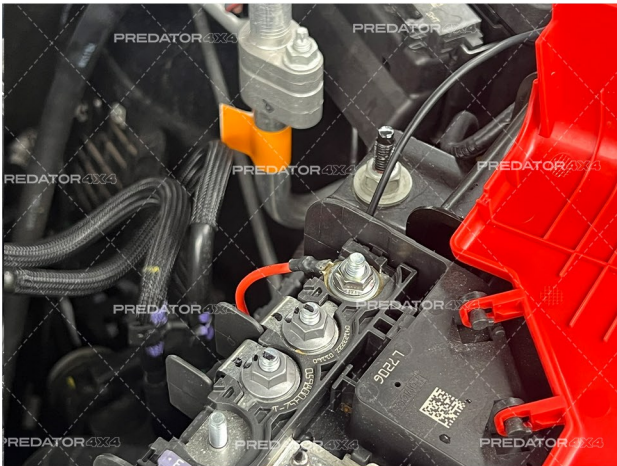

10. Connect the roof light wires to the battery harness.

11. Mount the relay on the bracket to the side of the battery this allows the wireless receiver to be easily connected.

12. Step 11 continued - Connect the wireless receiver to the relay using the white male and female plug.

13. Connect the red wire on the battery harness to the positive terminal on the battery.

14. Connect the black wire on the battery harness to the negative terminal on the battery or an appropriate earth point on the vehicles chassis.